FT-60 Quick Start (version 1.2)

Be sure antenna is securely attached.

Power up by turning the knob nearest the antenna clockwise.

Get to VFO mode by pressing V/M if necessary until no number shows in the upper left corner of screen.

Set frequency by first choosing the band by repeatedly pressing BAND as necessary and then turning the right dial or directly enter with keypad.

Set offset if necessary by briefly pressing W and then 4; turn right dial to select RPT.OFF for no offset, RPT.-, or RPT.+. Then press FW.

Set tone: briefly press W and then 1. Turn the right dial to select TONE, TSQL, REVerse Transmit, DCS, or OFF. Then briefly press FW again. If TONE selected, briefly press FW and then 2 to show the PL tone. Turn the right dial to select frequency.

Set volume by turning the right dial.

et squeich by turning the ring under the right dial.	
y R.G. Sparber KG7MQL@gmail.com	
fold here	
ssential frequencies, offsets, and tones	